

ASSEMBLY INSTRUCTIONS



Step 1:

Put the backrest on the supporting racks of the base frame. On one side of the frame, insert a pin (#1) into the hole near the rack and then insert an R clip into the hole on the pin, inside the metal tub.

Please Note: The backrest should be supported to prevent falling.



Step 2:

Insert the plastic stopper into the metal tub and push it in. Do the same thing for the other side of the chair.



Step 3:

Fix the backrest by inserting a pin (#2) into the joint located at the bottom of the backrest to connect with the supporting bar located in the base frame. Then, fix the pin with an R clip. There are 3 holes on the supporting bar, which are for 3 angle adjustments.



Step 4:

Fix the footrest by connecting the supporting bar. Inserting a pin (#2) into the joint located in the base frame to connect with the supporting bar. There are 3 holes on the supporting bar, which are for 3 angle adjustments of the footrest.



Step 5:

Connect the wires. One wire from the backrest, and the other one from the right armrest.



Step 6:

Mount the right armrest to the right side of the base frame by aiming the pair of fixing device and inserting them together.




Step 7:
Unlock the bill acceptor's panel, then insert a #3 screw through a washer and the hole and tighten it. It fixes the armrest on to the base frame, and also prevents from being stolen.



Step 8:
At the right bottom of the base frame, insert a screw and tighten it to fix the right armrest on to the base frame.



Step 9:
Mount the left armrest to the left side of the base frame by aiming the pair of fixing device and inserting them together.

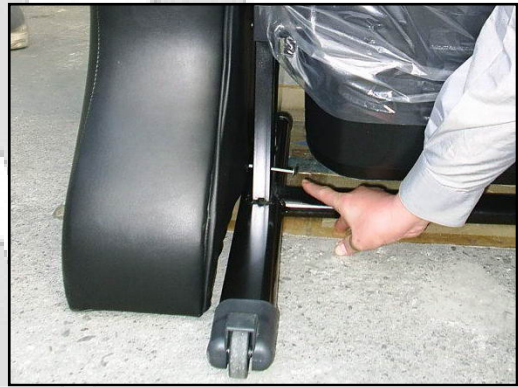


Step 10:
At the left bottom of the base frame, insert a screw and tighten it to fix the left armrest on to the base frame. There is no wire connection for left armrest.




Step 11:
Insert the footrest frame into the pocket of the footrest's cushion.



Step 12:
Connect the wires, one from the seat cushion, and the other one from the backrest. Then, put the seat cushion onto the base frame nice and neat.

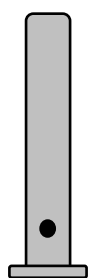


#1 pin

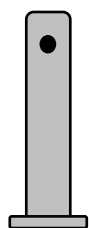

#2 pin



R Clip

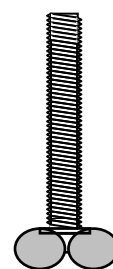

#3 Screw



Washer