


SETTING THE SYSTEM

NOTE: The chair has to completely stop and the back massage arms (rollers) should be at the original (top) position.


1. Check The Pre-set Value

Step 0

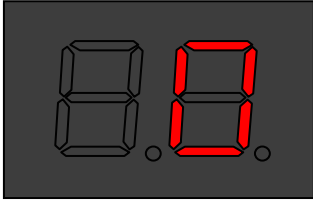


When the chair is standing by, the display shows “0”.

Step 1

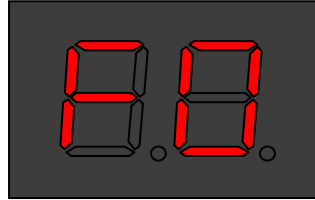


Press K1, the display will show “F0”.

Step 2

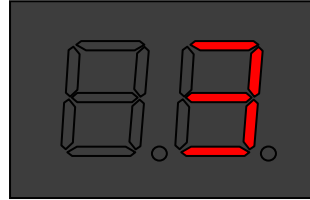


Press K4 to enter F0 mode, and check if the display shows “3”, which means \$1 for 3 minutes.

Step 3

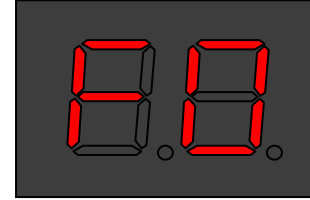

Press K4 again to save and exit F0 mode, the display will show “F0”.

Step 4

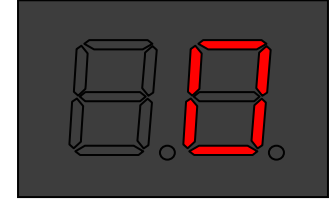

Press K1 again to save and exit the setting system. The display will show “0”. Now the chair is standing by for use.


2. Return to The Pre-set Value of us\$1 for 3 minutes

When in “Step 2” above, if you find the display shows the numbers is not “3”, it means the time for us\$1 has been changed. Please follow the instructions below to set the time back to us\$1 for 3 minutes.


1. When in “Step 2”, press K2 to increase the number, or press K3 to decrease the number until the “3” is obtained.
2. Then follow “Step 3” and “Step 4” above to complete the setting.

3. Example of Setting us\$1 for 5 minutes

Step 0

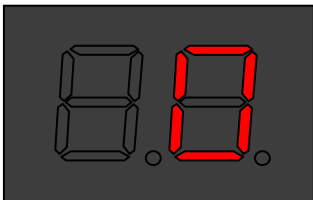


Step 1

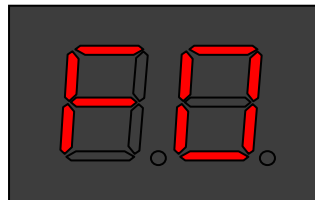


Step 2



Step 3

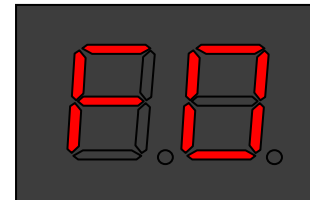

Step 4

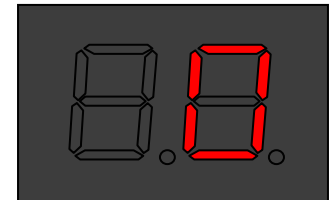

1. “Step 2” shows the number of “5”, which means us\$1 for 5 minutes.
2. To obtain a desired number (minutes), please follow above instruction highlighted in yellow.